

THE
RABBIT
COMPANY™

OVERVIEW

All products by The Rabbit Company™ are made from soft, smooth, body safe materials.

Our easy to use interface allows users to easily find the right stimulation and intensity. Get ready for sensual satisfaction that can not be matched and will have you craving for more.

The Flicking Rabbit



Internal Stimulator

Unique Flicker

External Stimulator

Flicker Function Button

Power Button & Vibration
Function Button - Head

Vibration
Function Button - Shaft

Magnetic Charging Port
(back of device)



GETTING STARTED

1. Before first use, charge your rabbit for approximately 2.5 hours. The USB charging cable can be plugged into any USB port or USB/AC power adapter (Not included).

- Flashing Light = Charging
- Solid Light = Fully Charged

2. Wash your rabbit with soap and water, or toy cleaner suitable for use with silicone items.

3. Lubricate your rabbit (if needed) with a water based, silicone compatible lubricant.



FAQs can be found at
www.TheRabbitCompany.com

Email us at
customercare@TheRabbitCompany.com
for any unanswered questions

5. Press and hold the  button for 3 seconds to turn your Rabbit ON. Press and hold the  button for 3 seconds to turn your device OFF.

6. To turn ON the vibrations on the head, and/or cycle through speeds, press the  button. Press and hold to turn OFF.

7. To turn ON the vibrations on the rabbit shaft and/or cycle through speeds, press the  button. Press and hold to turn OFF.

8. To turn ON the flicker function and/or cycle through speeds, press the  button. Press and hold to turn OFF.



CONTROLLING YOUR RABBIT

- Press and hold the  button for 3 seconds to turn your Rabbit ON. Press and hold 3 seconds again to turn your Rabbit OFF.
- Press the  button to turn on and increase vibration intensity on the head. There are a total of 10 vibration modes. Press and hold to turn OFF.
- Press the  button to turn on and increase vibration intensity on the rabbit shaft. There are a total of 7 vibration modes. Press and hold to turn OFF.
- Press the  button to turn on and increase wiggling intensity of the flicker. There are a total of 6 vibration modes. Press and hold to turn OFF.



CHARGING

- Put the magnetic charging plug on the designated charging area



- Flashing light indicates item is charging

- Solid light indicates item is fully charged

- Rabbits require approximately 2.5 hours for full charge

Flashing light =
Charging



Solid light =
Fully Charged



FUNCTIONS



Head Stimulator
10 Vibrating Modes



Unique Flicker
6 Wiggling Modes



Rabbit Stimulator
7 Vibrating Modes

HARE CARE™

Cleaning, Storage & Safety

1. Always clean your Rabbit thoroughly before and after each use.

2. We recommend using a premium water-based lubricant when needed. Silicone-based lubricants are not recommended and can cause damage to the Rabbit. Never use hand cream, or massage oils as lubricants for your intimate areas.



3. To properly clean your Rabbit, use a suitable silicone-compatible toy cleanser. If this is not available, wash the silicone area of your rabbit with luke-warm water and an antibacterial soap. Rinse clean and pat dry using



a lint-free cloth or towel. Do not use cleaners containing alcohol, petrol or acetone.

4. Avoid leaving your Rabbit in direct sunlight and never expose it to extreme heat.

5. Our products are designed to be splash-proof. Never immerse your Rabbit in water.



If your Rabbit appears to function abnormally, turn OFF and consult our customer care section on **TheRabbitCompany.com** where you will find help tips. Should you require further assistance please contact: **customer care@TheRabbitCompany.com**

SPECIFICATIONS

Materials

Body Safe ABS / Silicone

Size

233 x 77 x 44 mm

Weight

261 g

Battery

Li-ion 900 mAh

IPX

IPX6 Splashproof

Charging

2.5 hours

Use Time

50mins

Max Noise Level

<68 db

Interface

Head: 10 Vibrations modes

Rabbit: 7 Vibrations modes

Flicker: 6 Wiggling Modes

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.



RoHS



Complete user instructions in
additional languages can be
found at:

www.TheRabbitCompany.com

Designed and Developed by
The Rabbit Company™

Made in China
© The Rabbit Company™

FAQs can be found at
www.TheRabbitCompany.com

Email us at
customercare@TheRabbitCompany.com
for any unanswered questions

TheRabbitCompany.com