




bodywand® gplay

USER GUIDE

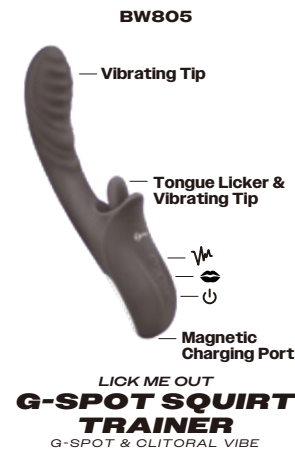





HOW TO USE



• POWER ON/OFF

Hold the  button for 3 seconds to turn your device on or off. The  button will glow once turned on.




• VIBRATION MODES

There are 10 adjustable vibration modes. Press the  /  button to cycle through each mode. Hold the  /  button to stop.

• LICKING MODES (BW805 ONLY)

There are 10 adjustable licking modes. Press the  button to cycle through each mode. Hold the  button to stop.

• TRAVEL LOCK

This device features a travel lock function. Press and hold the  /  and  for 3 seconds to lock/unlock. The LED will flash to confirm travel mode.

BW804 & BW805

• CHARGING THE DEVICE

Plug in your device using the included magnetic USB charger. The device will not function while charging, unplug the charger before using the device.

Flashing LED Light: Item is charging
Solid LED Light: Item is fully charged


BW804

It takes approx 120 minutes of charge for up to 40 minutes of use.

BW805



It takes approx 150 minutes of charge for up to 60 minutes of use.

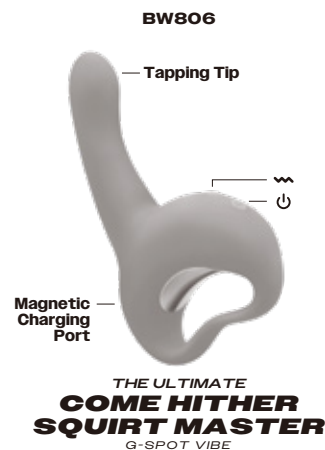If the device is travel locked before charging, ensure that travel lock is off after charging & before use.




HOW TO USE

• POWER ON/OFF

Hold the  button for 3 seconds to turn your device on or off. The  button will glow once turned on.

• TAPPING MODES

There are 10 adjustable tapping modes. Press the  button to cycle through each mode.

• CHARGING THE DEVICE

Plug in your device using the included magnetic USB charger. The device will not function while charging, unplug the charger to use the device.

Flashing LED Light: Item is charging
Solid LED Light: Item is fully charged

It takes approx 150 minutes of charge for up to 60 minutes of use.

BW806

CLEANING, STORAGE & SAFETY

Always clean and dry your device thoroughly before and after use.
DO NOT store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items. Clean the device with a soft, damp cloth.
DO NOT clean with an alcohol or chemical-based cleaner.

Use water based lubricant as desired.
Not compatible with silicone lubricant.

Avoid leaving your device in direct sunlight and never expose it to extreme heat.
Keep away from water, and never immerse it.

Front

WARNING

For adult use only. For external use only.

Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increased risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.

Bodywand shall not be liable for incidental or consequential damages resulting from the misuse of this product.

SPECIFICATIONS

	BW804	BW805
Size:		
Tamaño:	8cm x 2cm x 17cm	5cm x 4cm x 21cm
Taille:		
Größe:		
Weight:		
Peso:	117g	180g
Poids:		
Gewicht:		
Material:		
Material:	ABS + Silicone	ABS + Silicone
Matériau:	ABS + Silicone	ABS + Silicone
Material:	ABS + Silikon	ABS + Silikon
Battery:		
Bateria:	450mAh	700mAh
Batterie:		
Akku:		

SPECIFICATIONS

	BW806
Size:	
Tamaño:	19.3cm x 5.36cm x 11.2cm
Taille:	
Größe:	
Weight:	
Peso:	288g
Poids:	
Gewicht:	
Material:	
Material:	ABS + Silicone
Matériau:	ABS + Silicone
Material:	ABS + Silikon
Battery:	
Bateria:	1200mAh
Batterie:	
Akku:	

SPECIFICATIONS

Power:

BW804: 3.7V 450mAh USB2.0

BW805: 3.7V 700mAh USB2.0

BW806: 3.7V 1200mAh USB2.0

Splashproof:

IPX6 Splashproof, for cleaning the device.

Not to be used under water.

Battery Life:

BW804 Charging time: 120 minutes for up to 40 minutes of use.

BW805 Charging time: 150 minutes for up to 60 minutes of use.

BW806 Charging time: 150 minutes for up to 60 minutes of use.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

XGEN, LLC

Horsham, PA 19044 All Rights Reserved

UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK.

Phone: +44 2037692960,

E-Mail: UKresponsibleperson@arangaranga.com

EU Responsible Person:

ArangaRanga SL, Paseo de la Castellana 194, Madrid, 28046, Spain.

Phone: +34 910054258,

E-Mail: EUresponsibleperson@arangaranga.com

Email us at sales@xgenproducts.com for any unanswered questions

www.thebodywand.com

Back