

Front

SPECIFICATIONS

MATERIALS	ABS & Silicone
SIZE	59 x 59 x 66 mm
WEIGHT	~100 g
CHARGING TIME	90 Minutes
USE TIME	60 Minutes
BATTERY TYPE & CAPACITY	3.7V Li-Ion / 250 mAh
VIBRATION MODES	10 Tapping Modes
IPX	IPX6 Splashproof

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out trash bin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

WARNING!

This item is sold as an adult novelty only. Item does not contain phthalates and it is recommended to use water-based lubricants. Should any irritation or discomfort occur, stop using this item immediately. The usage of this product is in no way a means to warrant any medical claims.

www.rosegasm.com

secret **SK** kisses
ROSEGASM



So Thorny

Back

GETTING STARTED

1. Before first use, charge your device for approximately 90 minutes. The Magnetic USB charging cable can be plugged into any USB port of USB/AC power adapter (not included).

CHARGING = LED Light Flashing
FULLY CHARGED = Solid Light
LOW BATTERY = Rapid Flashing Light



4. Our products are designed to be waterproof. Your device can be used in the shower and can be run under water in the sink to be cleaned. **DO NOT** immerse your device in water



CONTROLS



10 TAPPING MODES



LONG PRESS
to turn ON/OFF
SHORT PRESS
to CHANGE MODES

TAPPING MODES

